

Français

JRI LORA GATEWAY Products N°12706-12707-12708-12709 USER GUIDE



PRSF017C_EN



TABLE OF CONTENTS

DLU		т
l.1.	Important information	1
L.2.	Regulatory and Environmental information	2
L.3.	Product content	2
Inst	ALLATION RECOMMENDATIONS	3
2.1.	Sources of attenuation and disturbances	3
2.2.	Positioning	3
Har	DWARE DESCRIPTION	4
TECH	INICAL PREREQUISITES	5
1.1.	General:	5
1.2.	DHCP mode:	5
1.3.	Fixed IP mode:	5
CON	IFIGURATION	5
5.1.	Start and login on the configuration portal:	5
5.2.	IP Configuration	8
5.3.	WAN Failover Priority	9
5.4.	Cellular configuration	10
5.5.	Date and time: (To be modified only if \neq from the PC time):	11
5.6.	LoRaWAN Parameters (SF and Packet Forwarder mode configuration)	11
5.7.	Save changes and restart	13
Rest	FART AND RESTORE CONFIGURATION	13
Nod	DE RED CONFIGURATION FOR MYSIRIUS SERVER USE	14
Add	THE GATEWAY IN MYSIRIUS	16
	 1.1. 1.2. 1.3. INST 2.1. 2.2. HAR TECI 4.1. 4.2. 4.3. CON 5.1. 5.2. 5.3. 5.4. 5.5. 5.6. 5.7. RES^T NOE ADD 	 Important information



1. DESCRIPTION

This document describes the installation procedure and utilization of the JRI LoRa Gateways.

1.1. Important information

The JRI LoRa gateways default configuration ensures communication between JRI LoRa devices (LoRa SPYs, LoRa Temp's) and JRI-MySirius Cloud. For a use with MySirius Server version, a modification is required in the built-in NodeRed server (see part 7).



- NEVER CONNECT A NEW GATEWAY ON A CUSTOMER'S ETHERNET NETWORK WITH A DHCP SERVER IF IT IS MEANT TO BE USED IN FIXED IP MODE.
- LORA GATEWAYS ARE CONFIGURED BY DEFAUT IN DHCP; A RESERVATION OF AN IP ADDRESS CAN BE MADE BY PROVIDING THE GATEWAY'S MAC ADDRESS. (SEE BACKSIDE STICKER)





TO SWITCH TO FIXED IP MODE, DO A SHORT RESET OF 10 SECONDS (>5 SEC AND <30 SEC) AND SEE STEP 5.2. NEVER DO A HARD RESET > 30 SEC (FACTORY RESET).

CONNECTING A JRI LORA GATEWAY TO THE CUSTOMER'S NETWORK ALLOWS REMOTE MANAGEMENT OF THE GATEWAY THROUGH ITS CONFIGURATION PORTAL. FOR THE ETHERNET VERSION, IT IS THE MEDIUM OF DATA COMMUNICATION, WHEREAS THE 4G VERSION USES THE ETHERNET NETWORK FOR COMMUNICATION BUT CAN SWITCH TO THE CELLULAR NETWORK IN CASE OF ETHERNET NETWORK FAILURE.





X	Do not dispose of with other waste. Instead, hand it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.
CE	Compliant with European Council Directives 2011/65/EU and 2014/53/EU for electrical safety, flammability, disruptive electromagnetic emissions, and immunity to environmental electrical disturbances.
RoHS	Embedded products comply with the chemical concentration limitations set forth in the directive 2015/863 of the European Parliament (Restriction of the use of certain Hazardous Substances in electrical and electronic equipment - RoHS). This product does not contain the banned chemicals.
F©	This device complies with part 15 of the FCC rules. Operation is subject to conditions. Contact us for more details. The grantee is not responsible for any changes or modification not expressly approved by the party responsible for compliance. The antenna(s) used for this transmitter, must be installed to provide a separation distance of at least 20 cm from all persons. Installers and end-users must be provided with operating conditions for satisfying RF exposure compliance.

1.3. Product content

- JRI LoRa Gateway
- LoRa Antenna 20 cm 3db. Can be replaced by Outdoor antenna 8db 1m20 with 10 m extension cable (see product 12524)
- Power supply
- Ethernet cable
- Mounting bracket





2. INSTALLATION RECOMMENDATIONS

To ensure optimal radio transmission, a certain number of recommendations must be respected, as any wireless transmission is subject to disturbances.

2.1. Sources of attenuation and disturbances

- The presence of obstacles between the LoRa recorders and the LoRa Gateway (wall, furniture, vehicles...) or near the antenna.
- The thickness of an obstacle. The attenuation is greater diagonally than perpendicularly.



- A solid metal wall without any openings will not allow transmission by radio. Small openings in the wall will attenuate the signal. Recommended size of openings is 35cm minimum.



2.2. Positioning

Position the Gateway's LoRa antenna at 45° degrees from the wall (avoid being in parallel). Place the Gateway in a high and central position according to the distribution of LoRa SPYs sensors. A LoRa SPY TEST (Ref: 12146/12308) can be used to determine the gateway's best location onsite.



- A large external antenna with 8dB gain (ref 12524) can be installed instead of the antenna provided by default. A cable of 10m long can be used for remote installation.



Use the mounting bracket provided for an easier installation.





To ensure your safety during installation or an intervention on a device placed in a high position, use proper equipment which provides adequate stability, wear appropriate non-slip shoes and install warning signs around the work area if the intervention takes place in an area of foot traffic.

3. HARDWARE DESCRIPTION



The above image shows the model with all features (ETHERNET and Cellular). For models that don't have a cellular radio, the chassis will not have a SIM slot.

Item	Description
Connectors	
Power	5 Volt power jack.
Ethernet	RJ45 Ethernet jack.
Reset	Reset button. Reboots device or restores factory defaults.
LoRa antenna	Connect external 3db LoRa antenna or extension cable for 8db LoRa antenna
SIM	Cellular models only. SIM slot. Refer to Installing SIM Card for details.
LEDs	
STATUS	Blinks when operating system is fully loaded.
LORA	Lights when LoRa software (node Red) is active.
CELL	<i>Cellular models only.</i> Lights when there is power to the radio. Blinks when the SIM is registered with the carrier.
Ethernet Link	Left LED on the Ethernet connector. Blinks when data is sent or received on the Ethernet link. Steady light when there is a valid Ethernet connection.
Ethernet Speed	Right LED on the Ethernet connector. Lit when the Ethernet is linked at 100 Mbps. If not lit, the Ethernet is linked at 10 Mbps.



4. TECHNICAL PREREQUISITES

4.1. General:

- A 220V electrical outlet is required within 1.5m from the Gateway location
- 4G coverage or RJ45 network socket depending on the Gateway chosen.
- Open TCP **8443** port to *device.jri-mysirius.com* platform for a MySirius CLOUD configuration, or to the private MySirius server IP address.
- TCP **5798** port open to *ds.devicehq.com* platform for remote management.

4.2. DHCP mode:

For a plug & play usage, it is recommended to let Gateways in DHCP mode (default configuration). A DHCP server is required for an automated IP configuration but it is mandatory to know the IP address that will be allocated to the Gateway for future modification. Otherwise, the Gateway IP address is only recoverable from *www.devicehg.com*.

4.3. Fixed IP mode:

For a fixed IP usage, see section 5.2. The user should provide the information bellow:

- IP address
- Subnetwork mask
- Gateway
- DNS

5. CONFIGURATION

5.1. Start and login on the configuration portal:

DHCP configuration:

- Power the Gateway.
- Connect the Gateway on a customer network with a DHCP server (Request a reservation of an IP address by providing the Gateway MAC address backside label).
- Open an internet browser at the GATEWAY IP address.
- In the login page that appears, provide the following default credentials:
 - User name: admin
 - Password: Admin1234. (Password is "admin" for former versions)

Depending on the Gateway version, access customization may be requested.

FIXED IP configuration:

- Power the Gateway.
- Wait for the Gateway to completely start: LoRa LED is steady / STATUS LED is blinking.
- Remove the sticker on the RESET button and press for 10 seconds with a paperclip.
- Wait for the full reboot of the Gateway: LoRa LED is steady / STATUS LED is blinking.



- Set the PC network adapter to automatic mode (Disconnect the PC from Ethernet or Wifi network)

nternet P	vrotocol Version 4 (TC	P/IPv4) Pro	opertie	s		×		
General	Alternate Configuration							
You can this cap for the	n get IP settings assigne bability. Otherwise, you appropriate IP settings otain an IP address aut ge the following IP addr	ed automati need to asl omatically ess:	cally if y k your r	your n	etwork supp k administra	oorts ator		
<u>I</u> P ac	idress:							
Sybnet mask:								
Default gateway:								

- Connect the Gateway to the PC using the Ethernet cable (disable the Firewall or antivirus if necessary).
- Open an internet browser and enter the address http://192.168.2.1

A			
Your conne	ction is not priv	/ate	
Attackers might b example, passwor	e trying to steal your info ds, messages, or credit c	ormation from 192. ards). <u>Learn more</u>	168.2.1 (for
NET::ERR_CERT_AUTH	IORITY_INVALID		
e lo ger en	Sine 3 highest level of se	county, <u>com on enna</u>	
Hide advanced			Back to safety
This server could i trusted by your co misconfiguration o	not prove that it is 192.1 mputer's operating syst or an attacker interceptir	168.2.1 ; its security em. This may be cau ng your connection.	certificate is not ısed by a

- If a security message appears (depending on the browser) Click on more details and continue to the site 192.168.2.1



- In the login page, enter the following default credentials:
 - User name : admin
 - Password : Admin1234.
 Click on Login

JriwyShus						
mPower™ Edge Intell	igence Conduit AP					
Username						
Password	Login					
MULTITECHI						

- After connection, the configuration page below opens.
- The left menu gives access to the different configuration panels.

Jri MySirius	mPower™ Edge Intelligence Conduit AP - Application Enablement Platform MTCAP-868-001A Firmware 5.1.6						
Home							
Save And Restart		MATION					
LoRaWAN ®	Device		LAN				
Ostur	Model Number	MTCAP-868-001A	Ethernet	(eth0)			
Setup	Serial Number	19791620	Mode	DHCP Client			
Firewall	Firmware	5.1.6	Bridge	-			
	Current Time	07/26/2021 09:13:06	MAC Address	00:08:00:4A:5B:2E			
Tunnels	Up Time	62 days 03:57:36	IPv4 Address	192.168.0.99			
Administration	WAN Transport	None	Mask	255.255.255.0			
Administration	Current DNS	192.168.0.239, 192.168.4.239	DHCP State	Disabled			
Status & Logs							
Commands			Lora				
Apps			Frequency Band	868			
7,662			EUI	00-80-00-00-00-01-30-8E			
Help			Hardware	MTCAP-LORA-1.5			
	Last updated: 11:13:00 A	M					
		MULTITECH Copyright © 1995 - 2021 b	by Multi-Tech Systems, Inc. · All rig	jhts reserved.			



5.2. IP Configuration

- Setup Menu > Network Interfaces.
- Click on the pencil in the Options column to modify "eth0".

Jri MySiri us	US mPower [™] Edge Intelligence Conduit AP - Application Enablement Platform MTCAP-L4E1-888-041A Firmware 5.1.6			admin as	administrator 📑			
Home	NETWORK	INTERFACES C	ONFIGURATIO)N (?)			Reset To Default	
Save And Restart								
	Name	Direction	Туре	IP Mode	IP Address	Bridge	Options	
LURAWAN	eth0	WAN IPv4	ETHER	DHCP Client	192.168.0.129/24		1	
Setup	ppp0	WAN IPv4	PPP	PPP	<u>} ك</u>	_	-	
	br0	LAN IPv4	BRIDGE	Static	192.168.2.1/24	br0	1	
Network Interfaces					<u>Example</u>			
WAN Configuration						1		

- Fill in the fields according to the desired configuration:
 - Set direction to WAN by default (For both Ethernet and Ethernet + cellular failover utilization)
 - Select DHCP client (default) for dynamic IP configuration or static IP for fixed IP configuration and enter the IP/Mask/Gateway/DNS information.
- Click on "submit"

Jri MySiri us	mPower [™] Edge Intelligence Conduit AP - Application Enablement Platform admin as adminis MTCAP-868-001A Firmware 5.1.6					
Home Save And Restart	NETWORK INTERFACE CONFIGURATION - ETH0 @					
LoRaWAN ®	Direction WAN ~					
Network Interfaces	IPv4 Settings Mode Gateway					
Global DNS	DHCP Client v 192.168.0.249					
DDNS Configuration	Static Primary DNS Server DHCP Client Example : 192 168 0 239					
DHCP Configuration	Mask Secondary DNS Server					
SMTP Configuration	255.255.255.0 192.168.4.239					
SNMP Configuration	Duhmit Downed					
Time Configuration	Submit Cancer					

0

To connect to the Gateway configuration page again, enter its new IP address in the browser if it has been modified (fixed IP given by the client or IP allocated by the client's DHCP server).



5.3. WAN Failover Priority

Failover mode defines which medium (Ethernet or Cellular) is used for the Internet connection and switches from one to another if a connectivity failure is detected. Priority can be set either on Ethernet or Cellular connection.

If Ethernet connection (eth0) is set to priority 1 by default. Cellular connection can be set as a failover connection by setting its priority to 2. Both connections should be set as WAN.

- Click Setup > WAN Configuration.
- Under Options, use the up and down arrows to change the priority of the appropriate connection.
- Click on Save and Apply to save the change.

Jri MySiri us	mPower [™] Edge Intelligence Conduit AP - Application Enablement Platform MTCAP-L4E1-868-041A Firmware 5.1.6					admin as administrator 🗜	
Home							
Save And Restart	ave And Restart						
LoRaWAN ®	General Configurat	ion					
Setup	Mode	FAILOVER					
Network Interfaces	WANs						
	Priority				Options		
WAN Configuration	1	Enabled	ppp0	CELLULAR	~ ~ 🖋		
Global DNS	2	Enabled	eth0	ETHERNET	~ ~ /		
DDNS Configuration							
DHCP Configuration					Reset To	Default	

To edit failover configuration:

- Under the Options column at the right, click the pencil icon (edit) for the selected WAN. The Failover Configuration page is displayed.
- Make the desired changes. Refer to Failover Configuration Fields for details.
- Click Finish.

FAILOVER CONFIGURATION
Monitoring Mode
ACTIVE ~
Interval (secs)
60
Hostname
www.google.com
Mode Type
ICMP ~
ICMP Count
10
Save Cancel



NOTE: To detect that a network interface (Ethernet or 4G) is functional and thus to be able to switch or not from one to another, the gateway will try to send a ping or an ICMP frame to an address (by default www.google.fr). Make sure that this address is accessible for the gateway.



5.4. Cellular configuration

- Insert a micro SIM card before starting the Gateway.
- Use Machine to Machine sim cards with data connection service of minimum 5Mb/month for small installations (ex: 10 monitored units with default JRI configuration)



- Go to the Cellular > Cellular Configuration menu.
- In the General Configuration tab, check that the "Enabled" box is checked.
- In the Modem Configuration tab, complete the PIN and APN fields according to the SIM card used.
- Let all other settings with default values and click on «submit».

Home	CELLULAR CONFIGURATION @	admin as administrator
Save And Restart		
LoRaWAN ®	General Configuration	
Setup	Inabled	Mode PPP v
Cellular	Connect Timeout	Dial-On-Demand
Cellular Configuration	90	
Wake Up On Call	Dialing Max Retries	
Radio Status	0	
Firowall	Cellular Mode	
Filewali	Auto	
SMS	Modem Configuration	
Tunnels	Dial Number	Init String 1
Administration	*99***1#	AT+CSQ
Status & Loge	Connect String	Init String 2
Status & Logs	Dial Drafix	Init Otelen 2
Commands	ATDT	init string 5
Apps	SIM Pin	Init String 4
Help	0000	
	APN	
<u>Example :</u>	matooma.m2m	
	Authentication	
	Keep Alive	
	ICMP/TCP Check	
	Data Receive Monitor	
	C Enabled	
	Window (minutes)	
	60	
	Submit	Reset To Default



GATEWAY LORA JRI

Références Produits N°12706-12707-12708-12709

NOTICE D'UTILISATION



PRSF017C_FR





TABLE DES MATIERES

1.	Desc	ription	. 1
1.	.1.	Informations Importantes	. 1
1.	.2.	Informations réglementaires et environnementales	. 2
1.	.3.	Contenu	. 2
2.	Reco	ommandations D'installation	. 3
2.	.1.	Sources de perturbations et atténuation du signal	. 3
2.	.2.	Positionnement	. 3
3.	Cara	ctéristiques techniques :	. 4
4.	Prér	equis Techniques	. 5
4.	.1.	Prérequis généraux :	. 5
4.	.2.	Prérequis mode DHCP :	. 5
4.	.3.	Prérequis mode IP FIXE :	. 5
5.	Cont	iguration	. 5
5.	.1.	Mise en route et connexion sur la page de configuration :	F
5.			. ว
_	.2.	Configuration IP	. 5 . 8
5.	.2. .3.	Configuration IP Configuration basculement 4G vers ETH (WAN)	. 5 . 8 . 9
5. 5.	.2. .3. .4.	Configuration IP Configuration basculement 4G vers ETH (WAN) Configuration cellulaire 4G	. 5 . 8 . 9 10
5. 5. 5.	.2. .3. .4. .5.	Configuration IP Configuration basculement 4G vers ETH (WAN) Configuration cellulaire 4G Configuration de la Date et de l'heure	. 5 . 8 . 9 10 11
5. 5. 5. 5.	.2. .3. .4. .5.	Configuration IP Configuration basculement 4G vers ETH (WAN) Configuration cellulaire 4G Configuration de la Date et de l'heure Vérification des paramètres Access Configuration : Erreur ! Signet non défin	. 5 . 8 . 9 10 11 ni.
5. 5. 5. 5. 5.	.2. .3. .4. .5. .6. .7.	Configuration IP Configuration basculement 4G vers ETH (WAN) Configuration cellulaire 4G Configuration de la Date et de l'heure Vérification des paramètres Access Configuration : Erreur ! Signet non défin Paramètres LoRaWAN (SF et configuration Packet Forwarder) :	. 5 . 8 . 9 10 11 ni. 11
5. 5. 5. 5. 5. 5.	2. 3. 4. 5. 6. 7. 8.	Configuration IP Configuration basculement 4G vers ETH (WAN) Configuration cellulaire 4G Configuration de la Date et de l'heure Vérification des paramètres Access Configuration : Erreur ! Signet non défin Paramètres LoRaWAN (SF et configuration Packet Forwarder) : Enregistrement des modifications et redémarrage	. 5 . 8 . 9 10 11 ni. 11
5. 5. 5. 5. 5. 6.	2. .3. .4. .5. .6. .7. .8. Rede	Configuration IP Configuration basculement 4G vers ETH (WAN) Configuration cellulaire 4G Configuration de la Date et de l'heure Vérification des paramètres Access Configuration : Erreur ! Signet non défin Paramètres LoRaWAN (SF et configuration Packet Forwarder) : Enregistrement des modifications et redémarrage	. 5 . 8 . 9 10 11 ni. 11 13 13
5. 5. 5. 5. 5. 6. 7.	2. .3. .4. .5. .6. .7. .8. Rede	Configuration IP Configuration basculement 4G vers ETH (WAN) Configuration cellulaire 4G Configuration de la Date et de l'heure Vérification des paramètres Access Configuration : Erreur ! Signet non défin Paramètres LoRaWAN (SF et configuration Packet Forwarder) : Enregistrement des modifications et redémarrage émarrage et point de restauration	. 5 . 8 . 9 10 11 11 13 13 14



1. DESCRIPTION

Ce document décrit la procédure d'installation et d'utilisation des Gateways LoRa JRI.

1.1. Informations Importantes

Par défaut, les Gateways LoRa JRI sont configurées pour communiquer avec les LoRa SPYs et se connecter à MySirius Cloud. Une utilisation avec MySirius Serveur nécessite d'apporter une modification dans le serveur NodeRed embarqué (voir partie 7).



- Ne jamais connecter une GateWay neuve sur un réseau client ETHERNET avec un serveur DHCP si elle doit être utilisée en IP fixe.
- Les GateWays LoRa sont configurées par défaut en DHCP, une réservation d'une adresse IP peut être faite en fournissant l'adresse MAC (voir l'étiquette au dos de l'appareil).



Pour une configuration en IP fixe, faire un RESET court de 10 sec (>5sec < 30 sec) et aller à l'étape 5.2. NE
 JAMAIS EFFECTUER DE RESET LONG >30 sec (RESET USINE).



Connecter une Gateway au réseau Ethernet du client permet de pouvoir la gérer à distance si besoin via la plateforme www.device.hq ou le portail de la Gateway. Pour la version ETHERNET c'est le moyen de transmission des données des LoRa SPYs vers MySirius. La Gateway 4G utilise le réseau GPRS pour la transmission des données mais peut basculer automatiquement vers le réseau ETHERNET si la communication 4G est interrompue.





	Ne pas jeter cet équipement avec les déchets ménagers. Remettez-le plutôt à un point de collecte désigné
	pour le recyclage des déchets d'équipement électrique et électronique. La collecte et le recyclage de vos
	déchets au moment de l'élimination aideront à conserver les ressources naturelles et participant à la
	protection de la santé et de l'environnement.
	Conforme aux directives européennes 2011/65 et 2014/53 relatives à la limitation de l'utilisation de
Œ	certaines substances dangereuses dans les équipements électriques/électroniques, la sécurité électrique et
	la sensibilité aux perturbations électromagnétiques.
	Conforme aux limites de concentration chimique énoncées dans la directive 2015/863 du Parlement
ηυπο	européen (Restriction de l'utilisation de certaines substances dangereuses dans les équipements électriques
	et électroniques - RoHS). Ce produit ne contient pas de produits chimiques interdits.
F©	Conforme à la partie 15 des règles FCC. Son fonctionnement est soumis à des conditions. Contactez-nous pour plus de détails. JRI n'est pas responsable des changements ou des modifications non expressément approuvés par la partie responsable de la conformité. La ou les antennes utilisées pour cet émetteur doivent être installées à au moins 20cm de tout utilisateur. Les installateurs et les utilisateurs finaux doivent disposer de conditions de fonctionnement pour satisfaire à la conformité d'exposition aux RF.

1.3. Contenu

- Gateway LoRa JRI
- Antenne LoRa 20 cm 3db. Peut être remplacée par une antenne extérieure 8db 1m20 avec rallonge de 10 m (voir produit 12524)
- Alimentation électrique
- Câble Ethernet
- Support mural





2. RECOMMANDATIONS D'INSTALLATION

Pour assurer une transmission radio optimale, il faut respecter un certain nombre de recommandations, car toute transmission sans fil est sujette à perturbations.

2.1. Sources de perturbations et atténuation du signal

- Présence d'obstacle dans le trajet des ondes entre le Nano SPY et le Nano SPY LINK (mur, mobilier, personne...) ou à proximité de l'antenne.
- Epaisseur d'un obstacle dans le trajet des ondes. L'atténuation est plus importante en diagonale que perpendiculairement



- Une paroi métallique pleine est infranchissable par les ondes. Par contre une paroi métallique ajourée laisse quand même passer les ondes en les atténuant



2.2. Positionnement

 Positionner l'antenne LoRa de la Gateway à 45° par rapport au mur (éviter d'être en parallèle), en hauteur, et en position central par rapport à la distribution des capteurs LoRa SPYs. Un LoRa SPY TEST (Ref : 12146/12308) peut être utilisé pour déterminer le meilleur emplacement.



- Une grande antenne externe avec un gain de 8dB (réf 12524) peut être installée à la place de l'antenne fournie par défaut. Un câble de 10m doit être utilisé pour une déporter l'antenne.



Utiliser le socle fourni pour la fixation du modèle Micro GateWay JRI.



- Une grande antenne externe avec un gain de 8dB (ref 12524) peut être installée en lieu de l'antenne fournie par défaut. Un câble de 10 permet de déporter cette antenne.



Pour assurer votre sécurité lors de l'installation ou d'une intervention sur un appareil en hauteur, utilisez un moyen stable et en bon état d'usage, portez des chaussures adaptées et non glissantes et installez un balisage de sécurité si l'intervention a lieu dans un endroit de passage.

3. CARACTERISTIQUES TECHNIQUES :

L'image ci-dessous montre le modèle avec toutes les fonctionnalités (ETHERNET/4G). Pour les modèles ETHERNET seulement, le châssis n'aura pas d'emplacement pour la carte SIM



Elément	Description
Connecteurs	
Power	Prise d'alimentation 5 volts.
Ethernet	Prise Ethernet RJ45 Ethernet
Reset	Bouton de réinitialisation. Redémarre l'appareil ou restaure les paramètres d'usine. Voir Réinitialisation de l'appareil
Antenne LoRa	Connection de l'antenne externe 3db LoRa ou le câble d'extension pour l'antenne 8db LoRa
SIM	Modèles 4G uniquement. Fente SIM. Reportez-vous à Installation de la carte SIM pour plus de détails
LEDs	
STATUS	Clignote lorsque le système d'exploitation est complètement chargé.
LORA	S'allume lorsque le logiciel LoRa (NodeRed) est actif.
CELL	Modèles 4G uniquement. S'allume lors de la mise sous tension. Clignote lorsque la carte SIM est enregistrée auprès de l'opérateur.
Ethernet Link	LED gauche sur le connecteur Ethernet. Clignote lorsque des données sont envoyées ou reçues sur la liaison Ethernet. Allumé fixe lorsqu'la connexion ETHERNET est établie
Ethernet Speed	LED droite sur le connecteur Ethernet. Allumé lorsque l'Ethernet est lié à 100 Mbps. S'il n'est pas allumé, l'Ethernet est lié à 10 Mbps.



4. PREREQUIS TECHNIQUES

4.1. Prérequis généraux :

- Une prise électrique de 220V est requise à 1.5m de l'emplacement de la Gateway
- Couverture 4G ou prise réseau RJ45 selon la Gateway choisie.
- Ouverture du port TCP **8443** vers la plateforme *device.jri-mysirius.com* pour une utilisation avec MySirius CLOUD ou l'adresse IP du serveur client pour une utilisation MySirius SERVEUR.
- Ouverture du port TCP **5798** vers la plateforme *ds.devicehq.com*

4.2. Prérequis mode DHCP :

Il est recommandé de laisser les Gateways en DHCP (configuration par défaut). Il est **impératif** de connaître l'adresse IP qui sera allouée à la Gateway si l'on veut pouvoir la reconfigurer ensuite (l'adresse IP de la Gateway est récupérable via la plateforme www.devicehq.com).

4.3. Prérequis mode IP FIXE :

Cette configuration est à faire lors de la 1^{ère} utilisation de la Gateway à l'aide d'un PC non connecté au réseau. Nous avons pour cela besoin des informations suivantes :

- Adresse IP
- Masque de sous réseau
- Passerelle + DNS

5. CONFIGURATION

5.1. Mise en route et connexion sur la page de configuration :

Configuration en DHCP :

- Alimenter la Gateway.
- Connecter la Gateway sur un réseau client avec un serveur DHCP (Demander une réservation d'une adresse IP en fournissant l'adresse MAC de la Gateway).
- Ouvrir un navigateur internet à l'adresse IP attribuée à la Gateway.
- Dans la page login qui apparaît, renseigner les identifiants par défaut suivants :
 - User name : admin
 - **Password** : Admin1234. (Le mot de passe pour les anciennes versions est admin)

(En fonction de la version de la Gateway, une personnalisation des accès peut être demandée)

Configuration en IP FIXE :

- Connecter la Gateway au réseau électrique.
- Attendre le démarrage complet de la Gateway : LED LoRa fixe / LED STATUS clignotant.
- Enlever la pastille du bouton RESET et appuyer de 10 secondes à l'aide d'un trombone.
- Attendre le redémarrage complet de la Gateway : LED LoRa fixe / LED STATUS clignotant.



-

Configurer la carte réseau du PC en automatique (non connecté au réseau Ethernet ou Wifi) utilisé pour la configuration.

Propriété	Propriétés de : Protocole Internet version 4 (TCP/IPv4)					
Général	Configuration alternative					
Les par réseau appropr	ramètres IP peuvent être déterminés automatiquement si votre le permet. Sinon, vous devez demander les paramètres IP vriés à votre administrateur réseau. Votenir une adresse IP automatiquement					
Out	tiliser l'adresse IP suivante :					
Adre	esse IP :					
Maso	que de sous-réseau :					
Pass	serelle par défaut :					

- Connecter la Gateway au PC à l'aide du câble Ethernet (désactiver le Pare feu ou l'antivirus si nécessaire)
- Ouvrir le navigateur internet, à l'adresse http://192.168.2.1

Votre connexion n'est pas privée
Des individus malveillants tentent peut-être de subtiliser vos informations personnelles sur le site 192.168.2.1 (mots de passe, messages ou numéros de carte de crédit, par exemple). <u>En savoir plus</u>
NET::ERR_CERT_AUTHORITY_INVALID
Aidez-nous à améliorer la navigation sécurisée en nous envoyant <u>des informations système et du</u> contenu de pages. Règles de confidentialité
Masquer les paramètres avancés Retour à la sécurité
Impossible de vérifier sur le serveur qu'il s'agit bien du domaine 192.168.2.1 , car son certificat de sécurité n'est pas considéré comme fiable par le système d'exploitation de votre ordinateur. Cela peut être dû à une mauvaise configuration ou bien à l'interception de votre connexion par un pirate informatique.
Continuer vers le site 192.168.2.1 (dangereux)

Si un message de sécurité apparaît (en fonction des navigateurs) Cliquer sur plus de détails et continuer vers le site 192.168.2.1



-

- Dans la page de connexion, renseigner les identifiants suivants :
 - User name : admin
 - **Password** : Admin1234. Cliquer sur **Login**

mPower [™] Edge Intelligence	CH O
Username	
Password	Login

- Après la connexion, la page de configuration ci-dessous s'ouvre.
- Le menu de gauche permet d'accéder aux différents volets de configuration.

MULTITECH	mPower [™] Edge I MTCAP-868-001A Firr	mPower [™] Edge Intelligence Conduit AP - Application Enablement Platform MTCAP-868-001A Firmware 5.0.0-AEP			admin as administrator	
Home		ATION				
Save And Restart	DEVICE INFORM	ATION				
LoRaWAN ®	Device		LAN			
Setup	Model Number	MTCAP-868-001A	Bridge	(br0)		
or up	Serial Number	19791620	MAC Address			
Firewall	Firmware	5.0.0-AEP	IPv4 Address			
Tunnels	Current Time	03/04/2020 11:10:34	Mask	255.255.255.0		
dimeto	Up Time	7 days 21:45:26	DHCP State	Disabled		
dministration	WAN Transport	None	Interfaces			
itatus & Logs	Current DNS	192.168.0.239, 192.168.4.239	Ethernet	(eth0)		
ommands			Mode	DHCP Client		
			Bridge	-		
pps			MAC Address	00:08:00:4A:5B:2E		
elp			IPv4 Address	192.168.0.99		
			Mask	255.255.255.0		
			DHCP State	Disabled		
			Lease Range	192.168.2.100-192.168.2.1	50	



5.2. Configuration IP

- Aller dans Menu Setup > Network Interfaces.
- Cliquer sur le crayon dans la colonne Options pour modifier les données de « eth0 »

	mPower [™] Edge Intelligence Conduit AP - Application Enablement Platform MTCAP-868-001A Firmware 50.0-AEP						
Home			NEIGURATION			1	Reset To Default
Save And Restart							
	Name						Options
	eth0	LAN	ETHER	DHCP Client	192.168.0.99/24		<i>i</i>
Setup	br0	LAN	BRIDGE		_ <u>Exemple :</u>	br0	1
Network Interfaces							

- Remplir les champs selon la configuration souhaitée :
 - Configurer « Direction » en WAN (Version Ethernet et Ethernet/4G).
 - Sélectionner le mode DHCP client (par défaut) ou IP fixe/statique et remplir les champs correspondants.
- Cliquer sur « submit » :

Jri MySirius	mPower [™] Edge Intelligence Conduit AP - Application Enablement Platform administrator €						
Home Save And Restart	NETWORK INTERFACE CONFIGURATIO	N - ETHO 🕲					
LoRaWAN ®	VAN (b) Direction						
Setup	IPv4 Settings						
Network Interfaces	Mode	Gateway					
Global DNS	DHCP Client	192.168.0.249					
DDNS Configuration	Static DHCP Client DHCP Client Exemp	DIe: -					
DHCP Configuration	Mask	Secondary DNS Server					
SMTP Configuration	255.255.255.0	192.168.4.239					
SNMP Configuration	Submit Cancel						
Time Configuration	Submit Calleet						

Pour vous reconnecter à la page de configuration de la passerelle, entrez sa nouvelle adresse IP dans le navigateur si elle a été modifiée (IP fixe donnée par le client ou IP allouée par le serveur DHCP du client).



5.3. Configuration basculement (WAN) : connexion prioritaire 4G avec bascule vers ETHERNET (uniquement pour le modèle 4G)

La GateWay LoRa JRI 4G peut basculer du mode de communication cellulaire vers le mode ETHERNET si une panne de connectivité est détectée.

Si la connexion cellulaire (PPP0) est la priorité 1 par défaut. La connexion ETHERNET (eth0) doit être définie comme connexion de basculement en configurant sa priorité sur 2. Les deux connexions doivent être configurées en WAN.

- Cliquer sur Setup> Configuration WAN.
- Aller dans Options, cliquer sur les flèches haut et bas pour modifier la priorité de la connexion choisie.
- Cliquer sur Enregistrer et appliquer pour enregistrer la modification.

MULTITECHO	mPower™ Edge MTCAP-L4E1-868-041#	Intelligence Conduit Firmware 5.1.6	AP - Application En	ablement Platform	admi	n as administrator 🕞
Home	WAN CONFIGU					
Save And Restart						
LoRaWAN ®	General Configurat	ion				_
Setup	Mode	FAILOVER				
Network Interfaces	WANs					_
WAN Configuration	Priority	State	Name	Туре	Options	
Global DNS	1	Enabled	ppp0	CELLULAR	~~ /	
DDNS Configuration	2	Enabled	eth0	ETHERNET	~ ~ /	_
DHCP Configuration					Reset To Default	
SMTP Configuration						

Pour modifier la configuration du basculement :

- Dans la colonne Options à droite, cliquer sur l'icône en forme de crayon (modifier) pour la connexion WAN sélectionnée. La page de configuration de basculement s'affiche.
- Effectuer les modifications souhaitées. Se reporter aux champs de configuration de basculement pour plus de détails.
- Cliquer sur Terminer.

Interval (secs) 60 Hostname www.google.com Mode Type ICMP ICMP IDMP I	ACTIVE		~
60 Hostname www.google.com Mode Type ICMP v ICMP Count	Interval (secs)		
Hostname www.google.com Mode Type ICMP ~ ICMP Count 10	60		
www.google.com Mode Type ICMP ~ ICMP Count 10	Hostname		
Mode Type ICMP V ICMP IDMP	www.google.com		
ICMP ~ ICMP Count	Mode Type		
ICMP Count 10	ICMP		~
10	ICMP Count		
	10		



ATTENTION : Pour détecter qu'une interface réseau (Ethernet ou 4G) est fonctionnelle et ainsi pouvoir faire ou non la bascule, la Gateway va essayer d'envoyer un ping ou une trame ICMP à une adresse (par défaut <u>www.google.fr</u>). **Il faut s'assurer que cette adresse est accessible pour la Gateway.**



5.4. Configuration cellulaire 4G

- Insérer une carte micro SIM avant de démarrer la GateWay.
- Utiliser des cartes SIM Machine to Machine avec un service de connexion de données d'au moins 5 Mo / mois pour les petites installations (ex: 10 unités surveillées avec configuration JRI par défaut)



- Aller dans le menu Cellular > Cellular Configuration
- Dans l'onglet Configuration générale, vérifier que la case "Enabled" est cochée.
- Dans l'onglet Configuration du modem, remplir les champs PIN et APN en fonction de la carte SIM utilisée.
- Laisser tous les autres paramètres avec les valeurs par défaut et cliquer sur «submit».

Home	CELLULAR CONFIGURATION	admin as administrato
Save And Restart		
LoRaWAN ®	General Configuration	
Setup	✓ Enabled	Mode
Cellular	Connect Timeout	Dial-On-Demand
Cellular Configuration	90	
Wake Up On Call	Dialing Max Retries	
Radio Status		
Firewall	Cellular Mode	
0140	Auto -	
SMS	Modern Configuration	
Tunnels	Dial Number	Init String 1
Administration	*99***1#	AT+CSQ
	Connect String	Init String 2
Status & Logs	CONNECT	
Commands	Dial Prefix	Init String 3
Apps	ATDT	
Uhha	SIM Pin	Init String 4
Help	0000	
	APN	
	matooma.m2m	
	Authentication	
	Keep Alive	
	ICMP/TCP Check	
	Data Receive Monitor	
	✓ Enabled	
	Window (minutes) 60	
	Submit	Reset To Default



5.5. Configuration de la Date et de l'heure

Date et heure : (A Modifier si ≠ de l'heure PC) : Menu Setup > Time : choisir UTC > submit

Current Date and Time: 03/04/2020 13:18:53 (Europe/Paris)	
Date		
MM/DD/YYYY		
Time		
HH:MM		
Time Zone		
Europe/Paris 🤟		
Enabled		
Enabled Polling Time (5 to 1440 minutes) 120		
Enabled Polling Time (5 to 1440 minutes) 120 Server		
Enabled Polling Time (5 to 1440 minutes) 120 Server time.nist.gov		
Enabled Polling Time (5 to 1440 minutes) 120 Server time.nist.gov Backup Server 1	Backup Server 3	
Enabled Polling Time (5 to 1440 minutes) 120 Server time.nist.gov Backup Server 1 Backup Server 2	Backup Server 3 Backup Server 4	

5.6. Paramètres LoRaWAN (SF et configuration Packet Forwarder) :

 JRI recommande de bloquer le SF entre 9 et 12 pour les GateWays 868 MHz: →Menu LoRAWAN → Network Settings → Settings → modifier la valeur du Max DataRate à 3-SF9BW125

Settings					
Tx Power (dBm)	Rx 1 DR Offset		ADR Step (cB)	Min Datarate	
26	~ 0	~	30	0 - SF12BW125	ž.
Antenna Gain (dBi)	Rx 2 Datarate		ACK Timeout	Max Datarate	
8	0 - SF12BW125	4	5000	3 - SF9BW125	~

- Aucune modification du SF n'est nécessaire pour les GateWays 915 MHz.
- Par défaut les Gateway LoRa JRI sont configurées en Network server : Chaque Gateway utilise le serveur NodeRed embarqué pour communiquer avec MySirius via le port TCP 8443.

Home		20	
Save And Restart	LONAWAN NETWORKING		
LoRaWAN ®	LoRa Mode		
Network Settings	Mode	Packet Forwarder	Network Server
Vou Monoromont	NETWORK SERVER	~ 4.0.1-r26.0	2.3.0
Key Management		Status	Status
Gateways	Restart LoRa Services	RUNNING	RUNNING

Il est possible d'utiliser le mode Packet Forwarder pour envoyer les mesures des appareils LoRa depuis des GateWays « esclaves » vers une seule GateWay « maître » (Network Server) qui doit toujours être configurée en IP fixe.



Aller dans Menu Administration \rightarrow LoRaWAN \rightarrow LoRA mode \rightarrow PACKET FORWARDER \rightarrow Restart LoRA services

Home Save And Restart	LORAWAN NETWORKING ②				
LoRaWAN ®					
Network Settings	Mode	Packet Forwarder	Network Server		
Key Management	PACKET FORWARDER	✓ 4.0.1-r26.0	2.3.0		
Key Management		Status	Status		
Gateways	Restart LoRa Services	RUNNING	DISABLED		

Aller en bas de la page et configurer les informations de la Gateway Network Server :

→ Sélectionner Network Manual→entrer l'adresse IP de la GateWay Network Server → Save & Restart

Server		
Network		
Manual	~	
Server Address		
127.0.0.1 (Exemple)		



5.7. Enregistrement des modifications et redémarrage

- Pour enregistrer les modifications, redémarrer la Gateway en cliquant sur « Save and Restart » dans le menu à gauche.

MULTITECHO	mPower [™] Edge Intelligence Conduit AP - Application Enablement Platform MTCAP-868-001A Firmware 5.0.0-AEP				admin a		
Home						Re	set To Default
Save And Restart	NETWORK INTER	FACES COI	NFIGURATION				
	Name						
	eth0	WAN	ETHER	DHCP Client	192.168.0.99/24		<i>i</i>
Setup	br0	LAN	BRIDGE			br0	1
Network Interfaces							

- Après le redémarrage, la Gateway peut être débranchée du PC et mise sur le réseau client (optionnel pour les versions 4G)



Pour se connecter de nouveau à la page de configuration de la Gateway, entrer sa nouvelle adresse IP dans le navigateur si elle a été modifiée (IP fixe donnée par le client ou IP allouée par le serveur DHCP du client).

6. REDEMARRAGE ET POINT DE RESTAURATION

- Redémarrage : Débrancher et rebrancher le bloc secteur ou cliquer sur Save/Restart
- Un appui sur le bouton RESET moins de 5 secondes, redémarre de la Gateway sans perdre sa configuration (Ex : Serveur Node Red).
- Un appui > 5sec et < 30 secondes, restaure la configuration par défaut JRI.
- Il est possible de créer son propre point de restauration : Aller dans Administration > Save / Restore > User Defined Default > cliquer sur Set





ATTENTION : Un reset de 30 secondes supprime complètement la configuration de la Gateway et nécessite une reprogrammation générale par JRI y compris la configuration du serveur NodeRed. Il est déconseillé d'effectuer cette action.



7. CONFIGURATION NODERED POUR UNE UTILISATION MYSIRIUS SERVEUR

Pour utiliser une Gateway JRI LoRa avec un serveur privé, une modification du logiciel embarqué NodeRed est nécessaire.

 Lors de la 1^{ère} connexion à la GateWay, il faut activer l'accès au paramètrage NodeRed via LAN et WAN. Administration → Access configuration → NodeRed settings

Home	ACCESS CONFIGURATION	0			
Save And Restart					
LoRaWAN ®	Web Server				
Setup	HTTP Redirect to HTTPS	HTTPS	Authorization		
Firewall	Enabled	Via WAN	Session Timeout (minutes)	1	
Tunnels	Via UAN	443			
Administration	Port				
User Accounts	80				
Self-Diagnostics (beta)	HTTPS Security				Show 1
Access Configuration	SSH Settings				
RADIUS Configuration	✓ Enabled	Port	✓ Via LAN	Via WAN	
X.509 Certificate		22			
X.509 CA Certificates	SSH Security				Show 1
Remote Management	ICMP Settings				
Notifications	✓ Enabled	Respond to LAN	Respond to WAN		
Web UI Customization	Node-RED Settings				
Firmware Upgrade	✓ Via LAN	Via WAN			

Aller dans la section Apps \rightarrow Launch Node RED (La case Enabled doit être cochée)

Jri MySiri us	mPower [™] Edge Intellig MTCAP-868-001A Firmware 5	Jence Conduit AP - 1.6	- Application Enablement Platform	admin as administrator 🛛 🕃
Home Save And Restart	MANAGE APPS @			Launch Node-RED
LoRaWAN ®	Node-RED Apps			
Setup	✓ Enabled			
Firewall	Name	Version	Status	Actions
T II C II	Development	0.0.0	Running	2
Tunnels	Custom Apps			
Administration	✓ Enabled			
Status & Logs	Name	Version	Status Info	Actions
Commands			No items found.	
Apps	Last Updated: 11:07:13 AM			
Help				
	MULTITE	CHO Copyright © 1995 - 202	21 by Multi-Tech Systems, Inc. · All rights reserved.	

-



 Se connecter sur l'interface Node-RED avec les mêmes identifiants utilisés pour se connecter à la page de configuration de la Gateway :



- Aller dans le menu Set Config \rightarrow double clic sur le bloc « change MySirius Server URL »

Node-RED					- Deploy -	≜ ≡
Q filter nodes	Read Config	Set Config	MySirius			+
✓ input				Edit inject node		
🗦 inject 🖻			writeMySiriusServer		Cancel	Done
catch	Change MyS	irius Server URL		Payload 🗸	az https://device.jri-mysirius.com:8443	
status		t t	setContextMySiriusServer	Topic		
ink 🖓						
digital gpio				C Repeat no	ne Y	
analog gpio					ject once at start?	
) mqtt				Name Cha	ange MySirius Server URL	
http 🖕				Note: "interval betw See info box for det	een times" and "at a specific time" will ails.	use cron.
websocket						

- Remplacer le nom du Cloud JRI par défaut (https://device.jri-mysirius.com:8443) par l'adresse IP du serveur MySirius du client (Exemple : 192.168.0.150).

- Cliquer sur " DONE " pour valider les modifications et fermer la fenêtre.



- Lorsque le message vert " Operation successful " s'affiche, utilisez le bouton pour appliquer les modifications.

- Désactiver l'accès aux paramètres de NodeRed pour des raisons de sécurité, appliquer les changements puis cliquer sur "Save and Restart" et attendre que le GateWay redémarre.

✓ Via LAN	Via WAN

- S'il est nécessaire de modifier à nouveau cette configuration, procéder à une réinitialisation de 10 secondes sur le GateWay, et recommencez tout le processus décrit dans la section 7.





8. AJOUT DE LA GATEWAY SUR MYSIRIUS

- Se connecter à MySirius avec un compte ADMINISTRATEUR
- Aller dans le tableau de bord de configuration en cliquant sur l'onglet « Administration »
- Cliquer sur la tuile « Gateway ».



- Cliquer sur + AJOUTER et suivre l'assistant



- Sélectionner GateWay LoRa[®] SPY, et saisir les informations requises puis cliquer sur ENREGISTRER.

<u>Attention</u> : il est important de saisir le numéro de série correct. Il sera utilisé pour lier votre passerelle à votre compte MySirius.



 Une fois ajoutée sur MySirius, la passerelle apparaîtra dans la liste des passerelles LoRa[®] SPY.



- Démarrer les appareils LoRa SPY / LoRa Temp' dans la zone de couverture radio de la Gateway. Une détection automatique est effectuée pour une installation facile.
- L'installation de la Gateway est réussie si la « Date du dernier message » est mise à jour. Noter que l'établissement d'une connexion avec et MySirius peut prendre quelques minutes. Il faut actualiser votre page Web jusqu'à ce que la date du dernier message s'affiche.

Traçabilité, surveillance et métrologie



www.jri.fr | info@group-mms.com

Support Technique : 08 92 68 09 33 | support@group-mms.com

JRI, Société par actions simplifiée au capital de 4 000 000 € Siège Social : 16 rue Louis Rameau / CS 90050 / 95872 BEZONS Cedex / France Tél : +33 (0)1 39 96 33 14 / Fax : +33 (0)1 39 96 33 33 / info@jri.fr SIRET 380 332 858 00048 / APE 2651B / TVA FR 02 380 332 858



5.5. Date and time: (To be modified only if \neq from the PC time):

- Setup menu > Time: choose UTC > then submit.

Home Save And Restart	TIME CONFIGURATION @		admin as administrator
LoRaWAN ®	Settings		
Setup	Current Date and Time: 11/24/2020 17:37 Date	:18 (Europe/Paris)	
Network Interfaces	MM/DD/YYYY		
WAN Configuration	Time		
Global DNS	HH:MM		
DDNS Configuration	Time Zone		
DHCB Configuration	Europe/Paris		
ON TO Configuration	SNTP Configuration		
SMIP Configuration	✓ Enabled		
SNMP Configuration	Polling Time (5 to 1440 minutes)		
Time Configuration	120		
Cellular	Server		
Firewall	time.nist.gov		
SMS	Backup Server 1	Backup Server 3	
Tunnels	Backup Server 2	Backup Server 4	
Administration			
Status & Logs			
Commands	Submit		Reset To Default

5.6. LoRaWAN Parameters (SF and Packet Forwarder mode configuration)

- JRI recommends to set the SF between 9 and 12 for 868 MHz Gateways to optimize radio communications:

 \rightarrow Lora WAN Menu \rightarrow Network Settings \rightarrow Settings \rightarrow change the value of the Max Data rate to 3 (SF9). Minimum Data rate is set by default to 0 (SF12)

Settings				
Tx Power (dBm)	Rx 1 DR Offset		ADR Step (cB)	Min Datarate
26	~ 0	9	30	0 - SF12BW125
Antenna Gain (dBi)	Rx 2 Datarate		ACK Timeout	Max Datarate
8	0 - SF12BW125	~	5000	3 - SF9BW125

- No SF change is required for 915MHz.
- By default, the JRI Gateways are configured as Network servers: Each Gateway uses the built-in Node Red server to communicate with MySirius (Cloud or Server) via TCP port 8443.

Home		ര					
Save And Restart	LORAWAN NETWORKIN						
LoRaWAN ®	LoRa Mode	LoRa Mode					
Network Settings	Mode	Packet Forwarder	Network Server				
March 4 march 1	NETWORK SERVER	√ 4.0.1-r26.0	2.3.0				
Key Management		Status	Status				
Gateways	Restart LoRa Services	RUNNING	RUNNING				

Example :



It is possible to set the Packet Forwarder mode to send the measurements of LoRa devices from a "slave" Gateway (Packet forwarder) to the "master" Gateway (Network Server) which must always be configured in fixed IP.

→ Administration Menu → LoRaWAN → LoRa mode → select PACKET FORWARDER mode → Restart LoRa services.

LORAWAN NETWORKING ()				
LoRa Mode				
Mode	Packet Forwarder	Network Server		
PACKET FORWARDER	✓ 4.0.1-r26.0	2.3.0		
	Status	Status		
Restart LoRa Services	RUNNING	DISABLED		
	LORAWAN NETWORKING LoRa Mode Mode PACKET FORWARDER Restart LoRa Services	LORAWAN NETWORKING () LoRa Mode Mode Packet Forwarder A.0.1-r26.0 Status Restart LoRa Services RUNNING		

Go to the bottom of the page and configure the Gateway Network Server information:

 \rightarrow Select Network Manual \rightarrow Enter the IP address of the GateWay Network Server \rightarrow Save & Restart.

Network	
Manual	~
Server Address	



5.7. Save changes and restart

- To save modifications, restart the Gateway by clicking on "Save and Restart" in the menu on the left.

Jri MySirius	mPower™ E MTCAP-868-001	mPower™ Edge Intelligence Conduit AP - Application Enablement Platform admin as administrator ₽ MTCAP-868-001A Firmware 5.1.6					nistrator 📑	
Home	NETWORK	NETWORK INTERFACES CONFIGURATION [®]						
Save And Restart	ILET TOTAL							
LoRaWAN ®	Name	Direction	Туре	IP Mode	IP Address	Bridge	Options	
LONAWAN	eth0	WAN IPv4	ETHER	DHCP Client	192.168.0.99/24		-	
Setup	br0	LAN IPv4	BRIDGE	Static	192.168.2.1/24	br0	<i>i</i>	
Network Interfaces								
Global DNS								

- After a reboot, the Gateway can be disconnected from the PC and connected to the customer's network (optional for 4G versions).



To connect to the Gateway configuration page again, enter its new IP address in the browser if it has been modified (fixed IP given by the client or IP allocated by the client's DHCP server).

6. RESTART AND RESTORE CONFIGURATION

- To restart a Gateway: Disconnect then reconnect the power supply or click on Save / Restart
- When the RESET button is pressed for less than 5 seconds, the Gateway can be restarted without losing its entire configuration (Ex: Node Red Server).
- Pressing the RESET button for 10 seconds (>5 sec; < 30 sec) allows you to restore the JRI default configuration.
- It is possible to create your own backup point:

Go to Administration > Save / Restore > User Defined Default > click on Set in the User Defined Default.

jri MySirius	mPower TM Edge Intelligence Conduit AP - Application Enablement Platform MTCAP-868-001A Firmware 5.1.6
Home	SAVE AND RESTORE CONFIGURATION @
Save And Restart	
LoRaWAN ®	Save and Restore Configuration
Setup	Restore Configuration From File Restore Browse No file selected
Firewall	Save Configuration To File Save
Tunnels	Reset to User-Defined Configuration Reset
Administration	User-Defined Default
User Accounts	Set Current Configuration As User-Defined Set
Self-Diagnostics (beta)	Clear User-Defined Default Clear
Access Configuration	User-defined default configurations are used to set deployment-specific default settings, overriding the factory default configurations. When the RESET button on the device is held for 5 seconds, the unit will be reset to the user-defined default settings if set, otherwise
RADIUS Configuration	factory default settings.
X.509 Certificate	to override user-defined default configurations and restore the unit to factory default, press and hold the RESE I button on the device for 30 seconds.
X.509 CA Certificates	
Remote Management	
Notifications	
Web UI Customization	
Firmware Upgrade	
Save/Restore	



A 30 second reset completely removes the configuration of the Gateway and requires general reprogramming by JRI including the configuration of the Node Red server. It is not recommended to do this action.



7. NODE RED CONFIGURATION FOR MYSIRIUS SERVER USE

To use a JRI LoRa Gateway with a private server, a modification of the embedded NodeRed software is required.

- On the 1st connection to the GateWay's configuration portal, enable NodeRed settings access via LAN and WAN. Save and apply changes.

Jri MySirius	mPower [™] Edge Intellig MTCAP-L4E1-868-041A Firmwa	ence Conduit AP - App	lication Enablement Platforr	n
Home		ION®		
Save And Restart	ACCESS CONFICURATI			
LoRaWAN ®	Web Server			
Setup	HTTP Redirect to HTTPS	HTTPS	Authorization	
Cellular	✓ Enabled	✓ Via WAN Port	5	
Firewall	Via WAN	443		
SMS	Port			
Tunnels	HTTPS Sequrity			Chauri
Administration				
	SSH Settings			
User Accounts	C Enabled	Port	ViaLAN	Via WAN
Self-Diagnostics (beta)	Linabled	22	V VIG LAIN	VIG WAIN
Access Configuration	SSH Security			Show 1
RADIUS Configuration	Reverse SSH Tunnel			
in bioo configuration		Server	Remote Port	
X.509 Certificate	Enabled		2222	
X.509 CA Certificates	Username	Authentication Method	Password	
Remote Management		Password	~ @	
Notifications	ICMP Settings			
Web UI Customization	✓ Enabled	Respond to LAN	Respond to WAN	
Firmware Upgrade	Node-RED Settings			
Save/Restore	✓ Via LAN	✓ Via WAN		
Debug Options	SNMP Settings			

- Go to Apps section \rightarrow Launch Node RED

Jri MySirius	mPower [™] Edge Intellig MTCAP-868-001A Firmware 5.	ence Conduit AP - 1.6	Application Enablement Platform	admin as administrator 🌗
Home	MANAGE APPS @			Launch Node-RED
Save And Restart				
LoRaWAN ®	Node-RED Apps			
Setup	✓ Enabled			
Firewall	Name	Version	Status	Actions
Tunnels	Development	0.0.0	Running	2
Administration	✓ Enabled			
Status & Logs	Name	Version	Status Info	Actions
Commands			No items found.	
Apps	Last Updated: 11:07:13 AM			
Help				
	MULTITE	CH () Copyright © 1995 - 202	21 by Multi-Tech Systems, Inc All rights reserved.	



- Connect to the Node-RED interface with the same identifiers used to connect to the configuration page of the Gateway:



- Go to Set Config top Menu \rightarrow Double click on the "change MySirius Server URL" bloc.

Node-RED					- Deploy - 💄 🚍
Q filter nodes	Read Config	Set Config	MySirius		+
∽ input				Edit inject nod	e
📫 inject		u	vriteMySiriusServer		Cancel Done
catch	Change MySi	rius Server URL		Payload	✓ ^a _z https://device.jri-mysirius.com:8443
status		s state	etContextMySiriusServer	Topic	
🔶 link 🔆					
digital gpio				C Repeat	none 🗸
🚺 analog gpio 🏮					□ Inject once at start?
) mqtt				Name	Change MySirius Server URL
http p				Note: "interv	val between times" and "at a specific time" will use cron. < for details.
websocket					

- Replace the name of the default JRI cloud server (https://device.jri-mysirius.com:8443) with the IP address of the client's MySirius server (Example: 192.168.0.150).
- Click on « DONE » to validate the changes and close the window.
- Click on **Deploy** to deploy the modified FLOW.
- When the "Operation successful" green message is displayed, use the button to apply changes.
- Disable access to NodeRed settings for security purposes, submit changes then click on Save and Restart and wait for the GateWay to reboot.

Node-RED Settings	
✓ Via LAN	Via WAN
Submit	

- If there's a need to change this configuration again; proceed by 10 seconds reset on the GateWay, and restart the whole process describes in section 7.



8. ADD THE GATEWAY IN MYSIRIUS

- Log in to MySirius with an ADMINISTRATOR account
- Open the configuration dashboard by clicking on the "Administration" tab

• м		SYSTEM 3	N ANALYSIS		NCE 🙀 4	ADMINISTRATION	METRO	LOGY
=	- Dashboard		- Martin					
	Subscription	-	SMS and calls	Contraction of the second	3	Installation	and Hal	品
	4/4 10.	/100	146	225		0	0	
	Modules Measure	ement points	SMS	Calls		Units to validate	Sensors to Install	Y
	Monitored unit template	25	Recorders	1923465		Gateways		
	3		7	1		()	
		Sec.	Used	Not used	数型	- Alegoria	22	

- Click on the « Gateways » tile.
- Click on +ADD and follow the wizard

= 0	Gateways	Alert Settings	Technical batches	Relay/Alarm	×
Filter	1	T DELETE THE SELECT	TION	2	+ ADD
NanoSpy (1)	LoRaSpy (2)		10	and a second	
Serial number	er	♦ Name	🗢 Zone	Date of last message	Inventory number + 🖒

- Select GateWay LoRa[®] SPY, enter the required information then click on SAVE.

Device Type	Gateway LoRa® SPY ▼
Serial number	12345678
Name	GateWay TEST
ventory number	Ex: 192.168.10.75/MAC: C8.3B.45.FA.08.80
Zone	DEMO
	CANCEL SAVE

- <u>Caution:</u> It is important to enter the correct serial number. It will be used to link your gateway with your MySirius account.
 - Once added on MySirius, the gateway will appear in the LoRa[®] Spy gateways list.

=	Gateways		🌲 Alert Settings		Technical batches	-	Relay/Alarm	10019
Filter			DELETE THE SELECTION	DN		1	2	
NanoSpy	(1) LoRaSpy (3)		-	1	2		A CONTRACT	THE A
Seria	l number		Name		Zone		Date of last message 🔶	Inventory number
12345678			GateWay TEST		DEMO		25 Nov 2020 16:28	Ex: 192.168.10.75/MAC: C8.3B.45.FA.08.80

- You can now start your LoRa SPY / LoRa temp' devices within the radio coverage area of the gateway. An automatic detection is done for an easy installation.
- The gateway installation is a success if the "Date of last message" of the gateway is filled with the current date. Note that it may take a few minutes to get a connection between the gateway and MySirius. You may refresh your web page until the date of last message shows up.





www.jri.fr | info@group-mms.com

Technical support : 08 92 68 09 33 | support@group-mms.com

JRI, Société par actions simplifiée au capital de 4 000 000 € Siège Social : 16 rue Louis Rameau / CS 90050 / 95872 BEZONS Cedex / France Tél : +33 (0)1 39 96 33 14 / Fax : +33 (0)1 39 96 33 33 / info@jri.fr SIRET 380 332 858 00048 / APE 2651B / TVA FR 02 380 332 858